
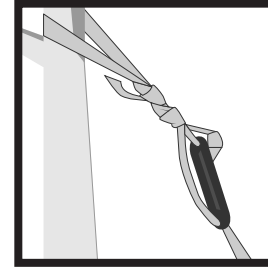
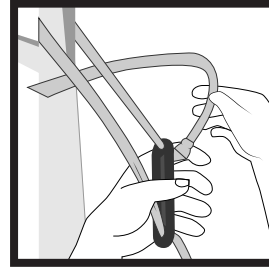
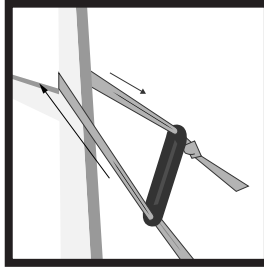
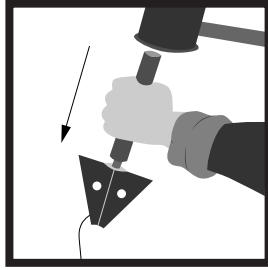


# How to install the Tree Frog Pro Series TREE ANCHORING KITS

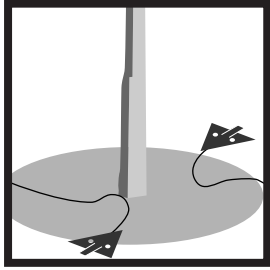

## Step 1

Place anchors on the solid ground around the tree (outside of root-ball). Face arrow heads toward the tree with the knot in guyline facing up.

*Coloque las flechas en la tierra alrededor del árbol. Asegurese que las cintas queden apuntando hacia el árbol.*

## Step 2

Using the installation tool (ITA), drive the first anchor straight down 18"-24" depending on the soil content. The sandier the soil, the deeper the anchor should be driven.

*Golpear la barra con la mandarina recto hacia abajo entre 18"-24", dependiendo de la solidez de la tierra, se debe de enterrar mas profundo las flechas*

## Step 3

Remove ITA from the ground. With your back to the tree, grasp the guyline and pull firmly toward you until the anchor is set and no longer "gives". DO NOT PULL STRAIGHT UP.

*Quite le barra de acero. Con el árbol a su espalda tire de la cuerda cn fuerza hast aque la flecha este firme y no ses mueve. NO TIRE RECTO HACIA ARRIBA.*

## Step 4

Wrap the guyline around the first established branch. Feed guyline through top of the open hole in tension bar. Create stop knot directly below that hole. Firmly grip tension bar, pull downward to make snug tension.

*Pase la cinta alrededor de la primera rama que este fuerte. Pase la cinta a al agujero de la tension, hale la cinta hasta que quede apretada la cinta y haga un nudo de bajo del agujero de tension, hale hacia abajo hasta lograr la tension deseada.*

## Step 5

With left hand grab guyline and tension bar together. With right hand wrap loose end of guyline around both sections directly above tension bar.

*Con la mano izquierda agarre la cinta la barra de tension al mismo tiempo. Con la mano derecha agarra la cinta que esta suelta y pasar alrededor de las dos cintas que estan.*

## Step 6

Tie a double slip knot. Tuck in excess guyline. Repeat the above steps for the remaining anchors.

*Haser un nudo corredizo doble y apretar. Repitir el metodo en las dos cintas siguientes*

Sustainable  
Biodegradable  
and Recycled  
Materials!

Install in less  
than 10 minutes!

Retail Kit - Up to 2" caliper  
Pro20 - Up to 2" caliper  
Pro40 - Up to 4" caliper  
Pro60 - Up to 6" caliper

Anchor Options:  
Nylon Anchors  
Metal Anchors  
Biodegradable Anchors



**TREE FROG**  
ENVIRONMENTAL PRODUCTS

