

Tree Frog Environmental Products, LLC

How to install the

Palm Batten Kit

(PBKM)

Tools Needed:

Flat head
screwdriver or
5/16" nut driver,
electric preferred

Supplies Needed:


Three 2" x 4" x 8" braces
Three 2" x 2" x 24" wood stakes




1. Tie shock cord strap temporarily around palm at desired collar location.




2. Position battens on palm trunk. Use shock cord to hold in place.

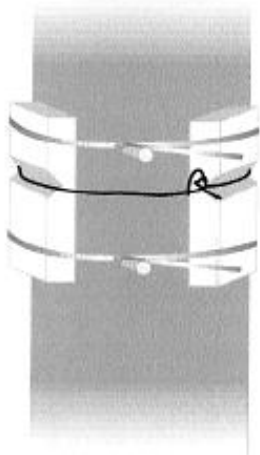


3. Wrap one stainless steel band around palm at top of battens, lacing end through locking head. Lock in place by flipping down screw. Repeat with second band around bottom of battens. Tighten screws with screwdriver or nut driver.

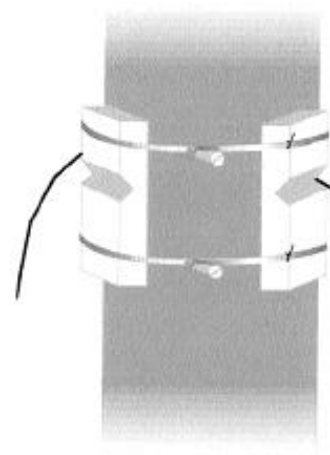

4. Attach excess end of band with ties provided. Remove shock cord.

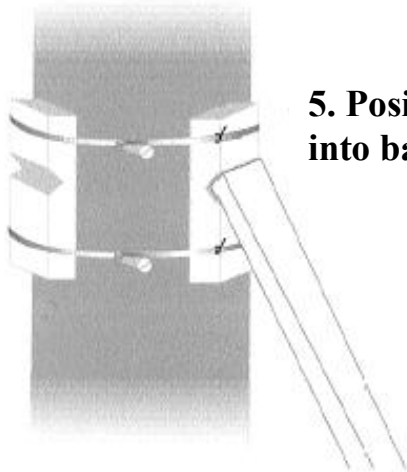

5. Position each brace into batten groove(s).

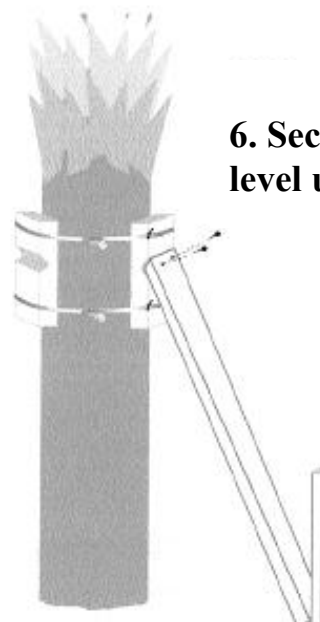

6. Secure brace at grade level using wood stakes.

7. Drive 2 nails or screws through brace into batten groove. Repeat for remaining braces.