



1

**TIE SHOCK CORD STRAP
TEMPORARILY AROUND PALM AT
DESIRED COLLAR LOCATION.**

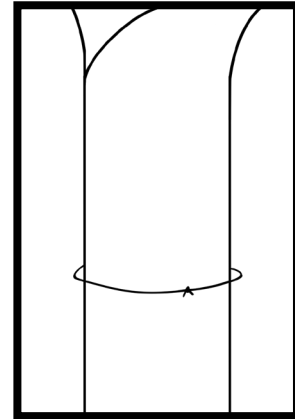


2

**POSITION BATTENS ON PALM TRUNK. USE
SHOCK CORD TO HOLD IN PLACE.**

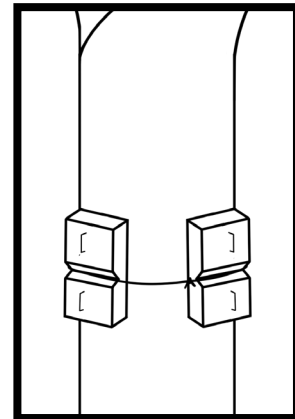


3

**WRAP ONE STRAP AROUND PALM AT TOP
OF BATTENS, LACING THE END THROUGH
THE RATCHET AS SHOWN. REPEAT WITH
SECOND BAND AROUND BOTTOM OF BAT-
TENS.**

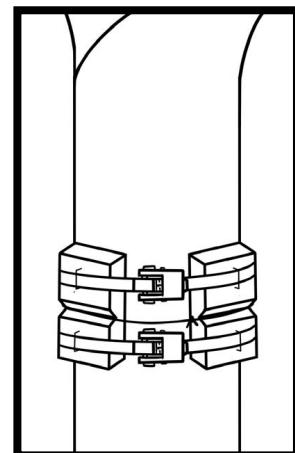


4

TRIM EXCESS END OF STRAP TO DESIRED LENGTH. REMOVE SHOCK CORD.

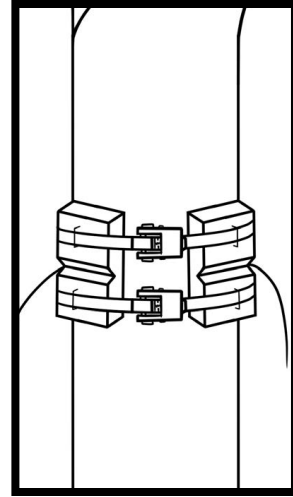

5

**POSITION EACH BRACE INTO BATTEN GROOVE(S).
SECURE BRACE AT GRADE LEVEL USING
WOOD STAKES.**

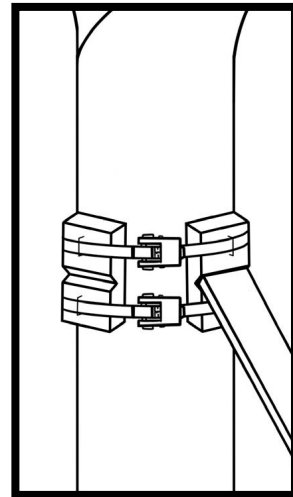

6

**DRIVE 2 NAILS OR SCREWS THROUGH
BRACE INTO BATTEN GROOVE.
REPEAT FOR REMAINING BRACES.**

